



データマット対応表 H8 ファミリ

UM...フラッシュメモリ(ユーザーマット) UBM...ユーザーブートマット DF...データフラッシュ/EEPROM
 ...書込み可能 x...書込み不可

CPU 名	FM ONE			FLASHMATE5V1			FLASH2		
	UM	UBM	DF	UM	UBM	DF	UM	UBM	DF
H8/3022	/	/	/	/	/	/	/	/	/
H8/3024	/	/	/	/	/	/	/	/	/
H8/3026	/	/	/	/	/	/	/	/	/
H8/3028	/	/	/	/	/	/	/	/	/
H8/3029	/	/	/	/	/	/	/	/	/
H8/3039	/	/	/	/	/	/	/	/	/
H8/3048B	/	/	/	/	/	/	/	/	/
H8/3052	/	/	/	/	/	/	/	/	/
H8/3052B	/	/	/	/	/	/	/	/	/
H8/3062	/	/	/	/	/	/	/	/	/
H8/3062A	/	/	/	/	/	/	/	/	/
H8/3062B	/	/	/	/	/	/	/	/	/
H8/3062R	/	/	/	/	/	/	/	/	/
H8/3064	/	/	/	/	/	/	/	/	/
H8/3064B	/	/	/	/	/	/	/	/	/
H8/3067	/	/	/	/	/	/	/	/	/
H8/3067R	/	/	/	/	/	/	/	/	/
H8/3068	/	/	/	/	/	/	/	/	/
H8/3069R	/	/	/	/	/	/	/	/	/
H8/3090	/	/	/	/	/	/	/	/	/
H8/36012	/	/	/	/	/	/	/	/	/
H8/36014	/	/	/	/	/	/	/	/	/
H8/36024	/	/	/	/	/	/	/	/	/
H8/36034	/	/	/	/	/	/	/	/	/
H8/36037	/	/	/	/	/	/	/	/	/
H8/36049	/	/	/	/	/	/	/	/	/
H8/36054	/	/	/	/	/	/	/	/	/
H8/36057	/	/	/	/	/	/	/	/	/
H8/36064	/	/	/	/	/	/	/	/	/
H8/36074	/	/	/	/	/	/	/	/	/
H8/36077	/	/	/	/	/	/	/	/	/
H8/36078	/	/	/	/	/	/	/	/	/
H8/36079	/	/	/	/	/	/	/	/	/
H8/36087	/	/	/	/	/	/	/	/	/
H8/36094	/	/	/	/	/	/	/	/	/
H8/36109	/	/	/	/	/	/	/	/	/
H8/3664	/	/	/	/	/	/	/	/	/
H8/3664N	/	/	/	/	/	/	/	/	x
H8/3670	/	/	/	/	/	/	/	/	/
H8/3672	/	/	/	/	/	/	/	/	/
H8/3684	/	/	/	/	/	/	/	/	/
H8/3687	/	/	/	/	/	/	/	/	/
H8/3687N	/	/	/	/	/	/	/	/	x
H8/36902	/	/	/	/	/	/	/	/	/
H8/36912	/	/	/	/	/	/	/	/	/
H8/3694	/	/	/	/	/	/	/	/	/
H8/38076R	/	/	/	/	/	/	/	/	/
H8/38086R	/	/	/	/	/	/	/	/	/
H8/38099	/	/	/	/	/	/	/	/	/

CPU 名	FM ONE			FLASHMATE5V1			FLASH2		
	UM	UBM	DF	UM	UBM	DF	UM	UBM	DF
H8/38524									
H8/38537									
H8/38602R									
H8/38606									
H8/38776									
H8/38002									
H8/38004									
H8/38024									
H8/38102									
H8/38104									
H8/38124									
H8/38324									
H8/38327									
H8/38344									
H8/38347									
H8/38424									
H8/38427									
H8/38444									
H8/38447									
H8/3854									
H8/3857									
H8/3337S									
H8/3437S									